

GIVE YOUR LIVING ROOM A NATURAL LOOK

Rustic LAMP

PATTERN

Soft tones make your living or outdoor room a relaxing place, and this rustic lamp contributes to that nicely.



WHAT DO YOU NEED?

- Katia Capri yarn: 3 balls of Sand 82134
- 3 mm crochet hook
- Metal rings: Ø 30 cm and Ø 15 cm
- Wool needle with large eye
- Scissors
- Safety screwdriver
- Wire stripper (or a sharp knife)
- Black electrical cord, length of your choice
- Flat plug, black
- Lamp fitting, black
- Strain relief, black
- E27 Lamp, 600 lumens

THIS IS HOW YOU MAKE IT


Try out the size of the crochet hook first and use a different size if necessary. You crochet with the rope stitch, like this: make 1 dc, 1 ch, 1 dc around 1 ch = base stitch. See also the pattern on the next page.

LAMP

End each round with 1 sl st in the 1st stitch of the round.

»



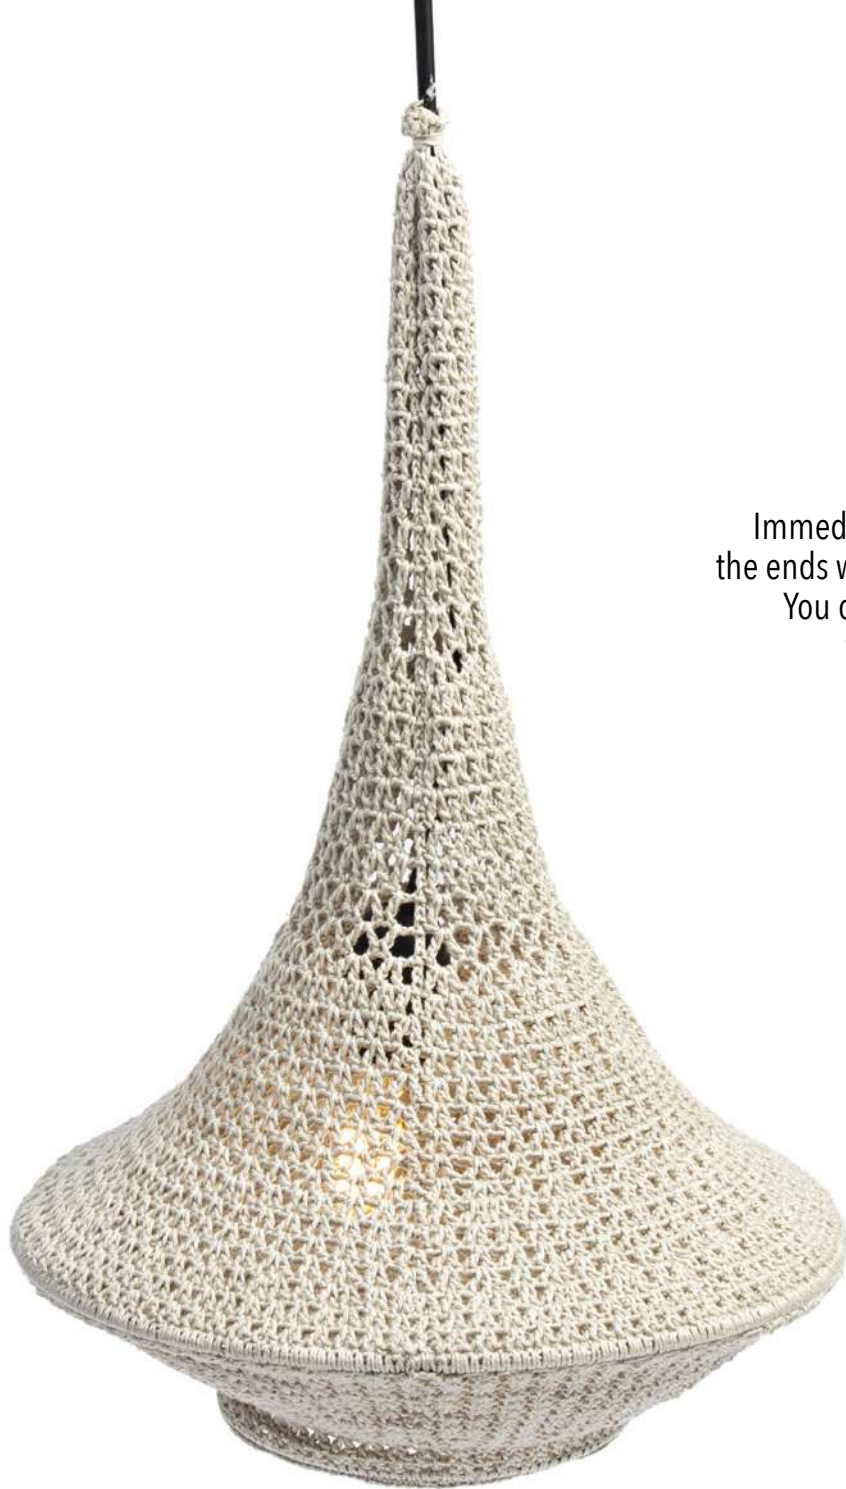

TIP!

Immediately weave in all the ends with the wool needle. You can barely reach them later.

Rnd 1: crochet 40 ch, join with 1 sl st in 1st ch.

Rnd 2: 1 ch, 40 sc, join with 1 sl st in 1st sc.

Rnd 3: 3 ch, 1 dc in 1st sc, 1 ch, 1 dc in 1st sc, rep (1 dc, 1 ch, 1 dc in 4th sc), join.

Rnd 4: rep Rnd 3, but work around the ch of the previous round and join.

Rnds 5-12: as Rnd 4.

Rnd 13: as Rnd 4, but crochet 2 ch instead of 1.

Rnd 14: as Rnd 13.

Rnd 15: 3 ch, rep (1 dc, 3 ch, 1 dc around the 2 ch), join with 1 sl st.

Rnd 16: 3 ch, rep (1 dc, 1 ch, 1 dc, 1 ch, 1 dc around the 3 ch), join with 1 sl st.

Rnd 17: 3 ch, 1 dc, 1 ch, 1 dc around each ch, join.

Rnds 18-20: as Rnd 17.

Rnd 21: as Rnd 13.

Rnds 22-24: as Rnd 21.

Rnd 25: as Rnd 21, but crochet 3 ch instead of 2 ch between the dc now.

Rnd 26: as Rnd 16.

Rnds 27-33: as Rnd 17.

Rnd 34: 3 ch, rep (1 dc, 1 ch, 1 dc around 1 ch, work around 2nd ch: 1 dc, 1 ch, 1 dc, 1 ch), end with 1 sl st.

Rnds 35-37: as Rnd 17.

Rnds 38-41: as Rnds 34-36.

Rnd 42: Take the metal ring of 30 cm Ø and crochet in 1 ch: 1 sc on each stitch of the previous round (= 1 sc in 1 dc, 1 sc around the ch, 1 sc in 1 dc). Insert the hook into the stitch of the previous round, the yarn goes

over the ring. Pull the yarn through the loop (like an sc) with the hook. Join with 1 sl st in the 1st ch.

Rnd 43: as Rnd 3.

Rnds 44-50: as Rnd 17. Dec from here.

Rnd 51: 3 ch, rep (1 dc, 1 ch, 1 dc, crochet in the next ch: 1 dc, 1 ch, 1 dc, make 1 dc in the next ch). Join with 1 sl st.


Rnd 52: 3 ch, rep (1 dc, 1 ch, 1 dc in 1 ch, crochet in the next ch: 1 dc, 1 ch, 1 dc, skip 1 dc). Join with 1 sl st.

Rnds 53-55: as Rnd 17.

Rnd 56: take the 15 cm Ø metal ring and work as Rnd 42.

Rnd 57: 1 ch, 1 sc on 1 sc, join with 1 sl st. Fasten off the last thread and use the wool needle to carefully weave it through a few stitches on the inside. Break the yarn.

PATTERN

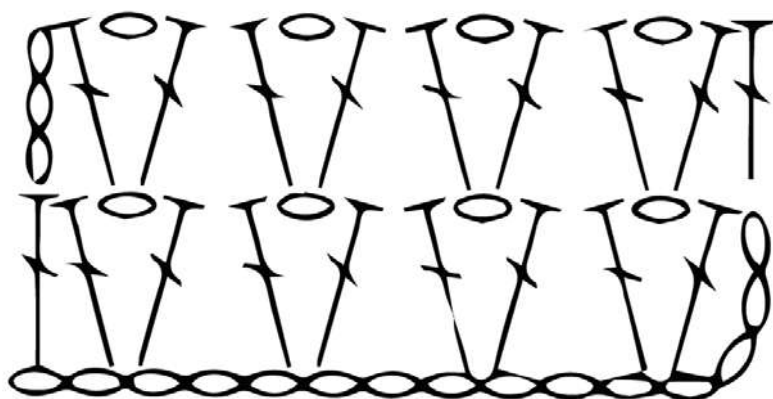

Rope stitch

TIP!

Crochet several lamps, in different colors if desired, and hang them together at uneven heights.

FINISHING

Reinforce the work with fabric stiffener spray, this step is optional.

ELECTRICAL PARTS

Attach the plug to one end of the cord and the strain relief with fitting to the other end. Insert the plug from the inside

through the narrow part of the lamp cover. Pull the cord as far as you like and determine the height of the bulb in the lamp. Cut a long strand of the yarn and tightly pull the narrow part upward. Use the yarn to tightly tie and wrap the lamp you made to secure it at about 28 cm from the fitting. Keep in mind that

the work will slightly sag when it hangs. Wind the cord around a stick or hang several lamps from the ceiling at different heights. Finally, screw in the light bulb. ●

